

[Back to home](#)[Specifications](#)[Customization](#)[Intialization](#)

Search for all of your Innova Hycross here.

VEHICLE SPECIFICATIONS

Customization

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, or at your Toyota dealer.

Some of the customizable features are changed in conjunction with the settings of My Settings. [\(Click Here\)](#)

Customizing vehicle features

■ Changing using the multiinformation display

[\(Click Here\)](#)

■ When customizing using the multiinformation display

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent 12-volt battery discharge, leave the hybrid system operating while customizing the features.

⚠ WARNING

During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

⚠ NOTICE

During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Customizable Features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

A Settings that can be changed using the multi-information display

B Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, – = Not available

■ Alarm* [\(Click Here\)](#)

Function	Default setting	Customized setting	A	B
Deactivates the alarm when the doors are unlocked using the mechanical key*	Off	On	-	<input type="radio"/>

* : Except for Malaysia and India

■ Gauges, meters and multi-information display([Click Here](#))

Function ^{*1}	Default setting	Customized setting	A	B
Clock (time adjustment)	—	—	<input type="radio"/>	-
Clock (display type) ^{*3}	12-hour display	24-hour display	<input type="radio"/>	-
Language ^{*2, 3}	English	Except English ^{*4}	<input type="radio"/>	-
Units	L/100 km	km/L	<input type="radio"/>	-
Meter type ^{*3, 5}	Analog	Digital	<input type="radio"/>	-
EV indicator ^{*3}	On	Off	<input type="radio"/>	-
Digital Speed ^{*6}	On	Off	<input type="radio"/>	-
ECO Accelerator Guidance/ECO Score ^{*3}	On	Off	<input type="radio"/>	-
Fuel Economy	Total Average	Trip Average	<input type="radio"/>	-
		Tank Average		
Energy monitor ^{*3}	On	Off	<input type="radio"/>	-
Drive information Type ^{*3}	Trip	Total	<input type="radio"/>	-
Drive information items (first item) ^{*3}	Distance	Average Speed	<input type="radio"/>	-
		Total Time		
Drive information items (second item) ^{*3}	Total Time	Average Speed	<input type="radio"/>	-
		Distance		
Trip Summary ^{*3}	ECO score	Drive info	<input type="radio"/>	-
Multi-Information display off	Off	On	<input type="radio"/>	-
Suggestion function ^{*3}	On	On (when the vehicle is stopped)	-	<input type="radio"/>
		Off		

*1: For details about each function: ([Click Here](#))

*2: The default setting varies according to country.

*3: This setting changes in accordance with My Settings.

*4: Available languages may differ depending on the target region.

*5: Vehicles with 7-inch display only

*6: Vehicles with 4.2-inch display only

■ Door lock([Click Here](#))

Function	Default setting	Customized setting	A	B
Speed linked door locking function ^{*1, 2}	On	Off	-	O ^{*3}
Shift position linked door locking function ^{*1, 2}	Off	On	-	O ^{*3}
Shift position linked door unlocking function ^{*1, 2}	Off	On	-	O ^{*3}
Driver's door linked door unlocking function ^{*1, 2}	Off	On	-	O ^{*3}

*1: If equipped

*2: This setting changes in accordance with My Settings.

*3: Setting that can be changed manually ([Click Here](#)) or at your Toyota dealer

■ Smart entry & start system^{*1} and wireless remote control([Click Here](#)),([Click Here](#))

Function	Default setting	Customized setting	A	B
Operation signal (emergency flashers) ^{*2}	On	Off	-	O
Operation buzzer volume ^{*1, 2}	5	Off	-	O
		1 to 7		
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked ^{*2}	30 seconds	60 seconds	-	O
		120 seconds		
Open door reminder buzzer (When locking the vehicle)	On	Off	-	O

*1: If equipped

*2: This setting changes in accordance with My Settings.

■ Smart entry & start system* ([Click Here](#))

Function	Default setting	Customized setting	A	B
Smart entry & start system	On	Off	-	O
Number of consecutive door lock operations	2 times	As many as desired	-	O

*: If equipped

■ Rear seat reminder ([Click Here](#))

Function	Default setting	Customized setting	A	B
Rear seat reminder function*	On	Off	O	-

*: This setting changes in accordance with My Settings.

■ Power back door^{*1} ([Click Here](#))

Function	Default setting	Customized setting	A	B
Power back door operations	On	Off	O	-
Operation buzzer volume	3	1	O	-
		2		
Opening angle	5	1 to 4	O	-
		User setting ^{*2}		

*1: If equipped

*2: The open position is set by the power back door switch.([Click Here](#))

■ Enabling easier driver entry and exit (power easy access system)^{*1} ([Click Here](#))

Function	Default setting	Customized setting	A	B
Driver's seat slide movement when exiting the vehicle ^{*2}	Full	Off	-	O
		Partial		

*1: If equipped

*2: This setting changes in accordance with My Settings.

■ Outside rear view mirrors ([Click Here](#))

Function	Default setting	Customized setting	A	B
Automatic folding and extending operation [*]	Linked to locking/unlocking of the doors	Off	-	O
		Linked to power switch operation		

* : If equipped

■ Power windows and panoramic moon roof* ([Click Here](#)),([Click Here](#))

Function	Default setting	Customized setting	A	B
Key linked operation (open)	Off	On	-	O
Key linked operation (close)	Off	On	-	O
Wireless remote control linked operation (open)	Off	On	-	O
Wireless remote control linked operation (close)	Off	On	-	O
Wireless remote control linked operation signal (buzzer) [*]	On	Off	-	O

* : If equipped

■ Panoramic moon roof* ([Click Here](#))

Function	Default setting	Customized setting	A	B
Opening direction when using the key linked operation	Tilt up	Slide	-	O
Opening direction when using the wireless remote control linked operation	Tilt up	Slide	-	O

* : If equipped

■ Automatic light control system ([Click Here](#))

Function	Default setting	Customized setting	A	B
Light sensor sensitivity ^{*1}	Standard	-2 to 2	-	O
Automatic light off system ^{*2}	Linked to operation of the power switch	Linked to the driver's door	-	O
Time elapsed before the headlights turn off (Extended Headlight Lighting)	30 seconds	60 seconds	-	O
		90 seconds		
		120 seconds		

*1: This setting changes in accordance with My Settings.

*2: This setting can be customized in some countries.

■ PCS (Pre-Collision System)^{*1} ([Click Here](#))

Function	Customized setting	A	B
Pre-Collision System ^{*2}	ON/OFF	O	-
Warning timing	Later/Default/Earlier	O	-

*1: If equipped

*2: The system is automatically enabled each time the power switch is turned to ON.

■ LDA (Lane Departure Alert)* ([Click Here](#))

Function	Customized setting	A	B
Acceleration setting	Low/Mid/High	O	-
Speed setting (short press)	1 km/h/5 km/h/10 km/h	O	-
Speed setting (long press)	1 km/h/5 km/h/10 km/h	O	-

* : If equipped

■ Dynamic radar cruise control* ([Click Here](#))

Function	Customized setting	A	B
Acceleration setting	Low/Mid/High	O	-
Speed setting (short press)	1 km/h/5 km/h/10 km/h	O	-
Speed setting (long press)	1 km/h/5 km/h/10 km/h	O	-

Function	Customized setting	A	B
DRCC(RSA)	ON/OFF	O	-
Speed limit offset	-5~+5	O	-
Guide message	ON/OFF	O	-
Curve speed reduction	OFF/Low/Mid/High	O	-

* : If equipped

■ RSA (Road Sign Assist)* ([Click Here](#))

Function	Customized setting	A	B
Road Sign Assist	ON/OFF	O	-
Excess speed notification method	None/Visual/Visual & Audible	O	-
Excess speed notification level	10 km/h / 5 km/h / 2 km/h	O	-

* : If equipped

■ Driver break suggestion ([Click Here](#))

Function	Customized setting	A	B
Driver break suggestion	ON/OFF	O	-

■ BSM (Blind Spot Monitor)* ([Click Here](#))

Function	Default setting	Customized setting	A	B
BSM (Blind Spot Monitor)	On	Off	O	-
Outside rear view mirror indicator brightness	Bright	Dim	O	-
Alert timing for presence of approaching vehicle (sensitivity)	Intermediate	Early	O	-
		Late		

* : If equipped

■ RCTA (Rear cross traffic alert) function*¹ ([Click Here](#))

Function	Default setting	Customized setting	A	B
RCTA (Rear Cross Traffic Alert)	On	Off	O	-
Buzzer volume* ²	2	1	O	-
		3		

*¹: If equipped

*²: This setting is linked with the buzzer volume of the Toyota parking assist-sensor.

■ Toyota parking assist-sensor*¹ ([Click Here](#))

Function	Default setting	Customized setting	A	B
Toyota parking assist-sensor	On	Off	O	-
Buzzer volume ^{*2}	2	1	O	-
		3		

*1: If equipped

*2: This setting is linked with the buzzer volume of the RCTA (Rear cross traffic alert) function.

■ Automatic air conditioning system^{*1} ([Click Here](#))

Function	Default setting	Customized setting	A	B
Switching between outside air and recirculated air mode linked to "AUTO" switch operation ^{*2}	On	Off	-	O

*1: If equipped

*2: This setting changes in accordance with My Settings.

■ Illumination ([Click Here](#))

Function	Default setting	Customized setting	A	B
Time elapsed before the interior lights turn off ^{*1}	15 seconds	Off	-	O
		7.5 seconds		
		30 seconds		
Operation after the power switch is turned off (interior lights)	On	Off	-	O
Operation when the doors are unlocked (interior lights)	On	Off	-	O
Operation when you approach the vehicle with the electronic key on your person (interior lights) ^{*2}	On	Off	-	O
Operation when the doors are unlocked (outer foot lights) ^{*2}	On	Off	-	O
Operation when you approach the vehicle with the electronic key on your person (outer foot lights) ^{*2}	On	Off	-	O
Time elapsed before the outer foot lights turn off ^{*1, 2}	15 seconds	Off	-	O
		7.5 seconds		
		30 seconds		
Changes the brightness of the ceiling illumination lights ^{*2}	100%	75%	O	-
		50%		
		25%		
		Off		

*1: This setting changes in accordance with My Settings.

*2: If equipped

■ My Settings ([Click Here](#))

Function	Default setting	Customized setting	A	B
My Settings function	On	Off	O	-

■ Vehicle customization

- When the speed linked door locking function and shift position linked door locking function are both on, the door lock operates as follows.
 - If the vehicle is started with all the doors locked, the speed linked door locking function would not operate.
 - If the vehicle is started with any door unlocked, the speed linked door locking function will operate.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
- When the smart entry & start system is off, the selecting door to unlock cannot be customized.

© Toyota Kirloskar Motor Pvt Ltd. 2022